

CAMBRIDGE 30



Castle Grey



Forest Green

Earthtone Cedar



Harvard Slate



MARATHON 20

Bark Brown



Pacific Green



Pacific Red



Green



SUPERGLASS 25M

Dual Grey



Dual Brown



NW Driftwood




Earthtone Cedar




Rfi
RIVIERA FILIPINA, INC.
The Roof Tile Expert

FIBERGLASS ASPHALT SHINGLES INSTALLATION DETAILS

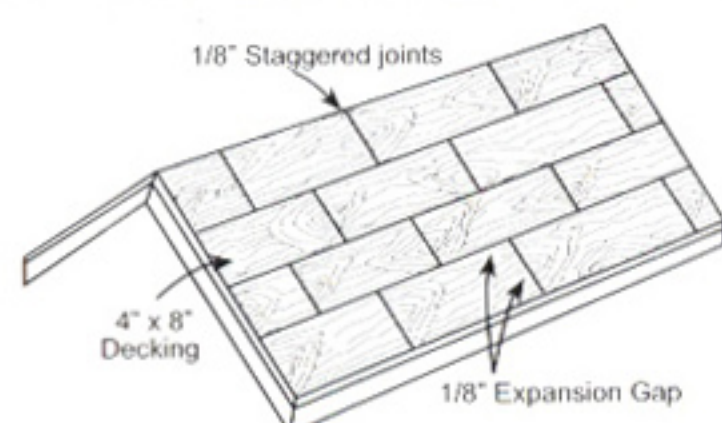


Lay the plywood vertically and staggered. Allow 1/8" expansion gap at the joints and cover with thick asphalt cement or equivalent. Make sure that the surface is flat by using a string. Uneven surface will telegraph on the shingles so avoid them at all cost.

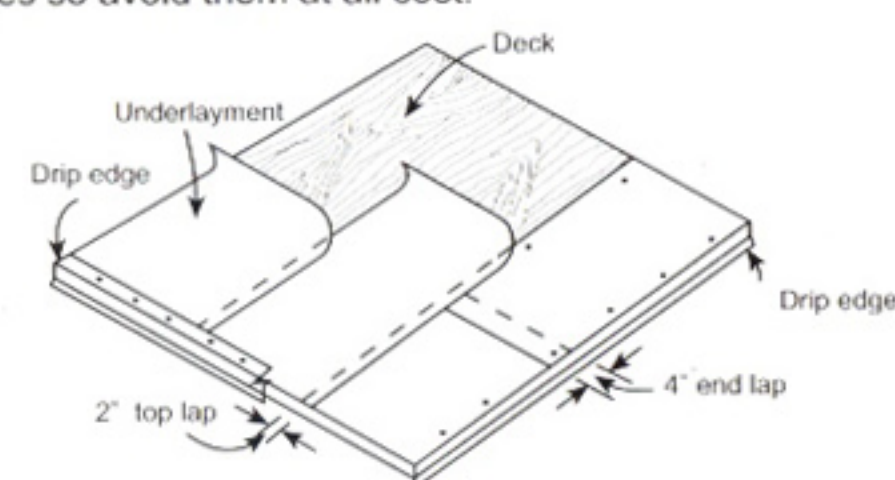

Lay the felt parallel to the eaves, lapping each courses at least 2 inches over the underlying course. Secure the felt with only enough nails to hold it in place. If two or more pieces are required to continue a course, lap the ends at least 4 inches. End laps in a succeeding course should be located at least 6 feet from end laps in the preceding course. Lap the felt 6 inches from both sides over all hips and ridges. Where the roof meets a vertical surface, carry the underlayment 3 to 4 inches up the surface.



Apply drip edges directly to the deck along the eaves and over the underlayment along the rakes.

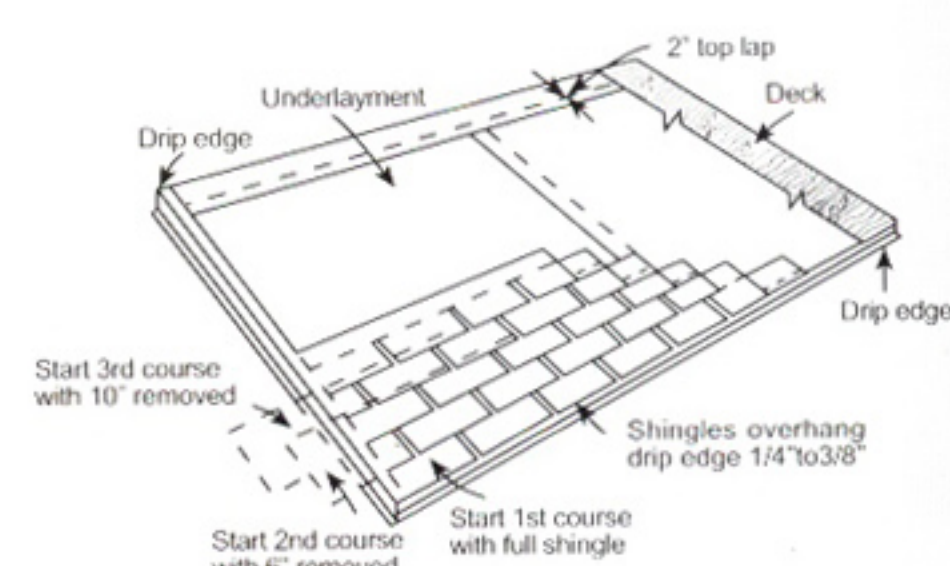

The first course starts with a full length shingle. The second course then starts with a shingle that has 6 inches removed, the third course with a shingle that has 12 inches removed and so on through the sixth course which starts with a shingle that has 30 inches removed. Adjacent shingles in each course are all full length. The seventh course again starts with a full length shingle and the pattern is repeated every sixth course.




EXHAUST VENT FOR ROOF RIDGE


INSTALLATION IS AS EASY AS 1-2-3

(Optional)


Virtually invisible when installed
Provides superior attic ventilation
No fabric overwrap
Eliminates waste---every piece can be used
No complicated fitting, wrapping or connectors
Cannot crack or dent during shipping or installation
Lowest profile in the industry
Will not warp, curl or loosen from weather conditions
No external baffle to trap dirt
Flexible, easy to handle and transport
Will not corrode, rust or turn brittle

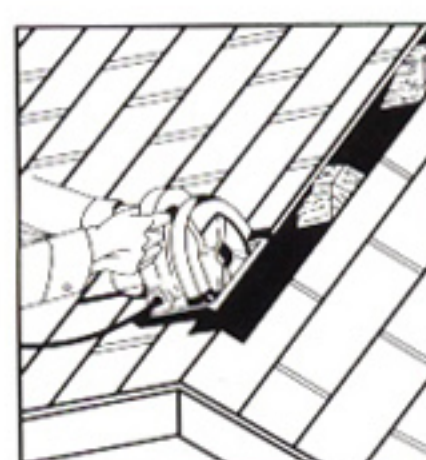

1 Cut a 2" slot along ridge line

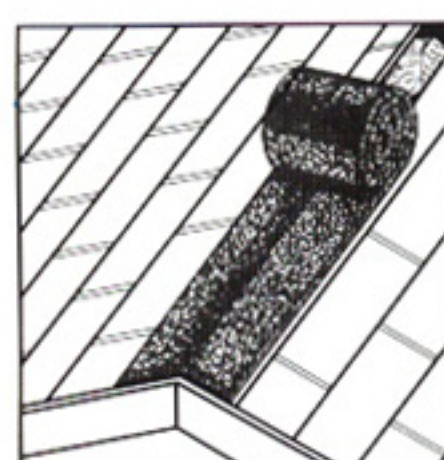

2 Uncoil Cobra Ridge Vent.

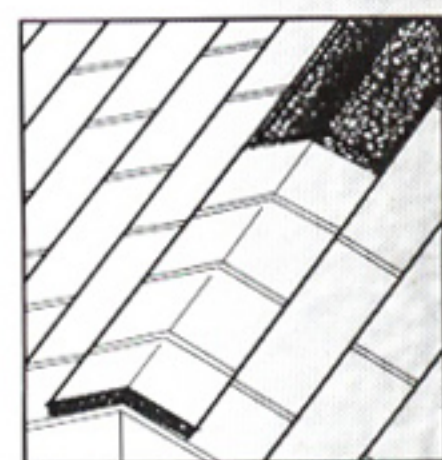

3 Install ridge cap shingles directly over Cobra Ridge Vent.

Rfi
RIVIERA FILIPINA, INC.
The Roof Tile Expert

(Present) No. 75 South Avenue (Timog), Quezon City
(NEW) No. 25 South Avenue (Timog), Quezon City
Tel. nos.: 9222471, 9247751-52, 9247758-59 Fax no.: 9217532
E-mail: rfisales@speedsurf.pacific.net.ph Website: www.rfi.com.ph

CUBAO SALES OFFICE
#529 cor. South Road
EDSA Cubao, Quezon City
Tel. Nos.: 7214515/
7237597
Fax No.: 7237597

MC HOME DEPOT
Fort Bonifacio
CS 190 Fort Bonifacio,
Global City
Taguig, Metro Manila
Tel./Fax no.: 8154810

MC HOME DEPOT
Ortigas Center
Unit A29, #168 Ortigas
Center, Ortigas cor.
Meralco Ave., Pasig City
Tel./Fax No.: 6346128

CEBU SALES OFFICE
A. Cortez Ave., corner
J. Rizal Street,
Mandaue City, Cebu
Tel. Nos.: (032) 3467579/
3461569
Fax No.: (032) 3467578

DAVAO SALES OFFICE
Door No. 4 YL Bldg.,
JP Laurel cor.
Mitsui Busan Bajada,
Davao City
Tel. No.: (082) 2246873